

Sequence	Description	Manual Page No.	Barcode
1.	Set All Defaults	12	 \$\$\$+/2
2.	Start Configuration	12	 \$\$\$+/3
3.	RS232 Mode	13	 0008
4.	CR+LF Terminator	19	 7S2+
5.	Save Parameters	12	 \$\$\$+/0
6.	End Configuration	12	 \$\$\$+/4